


Define offsets for ring targets when used with `acousticeye.application`

To use circle targets with the `acousticeye.application` the offset has to be set from the Range Settings as the Range Configurator can't automatically detect the mounting reference. For SIUS SPUs the Range Configurator may offer the default offsets and sets them automatically during the execution of the wizard. Even though sometimes it is important to set an offset manually.

This can be achieved in the Range Settings for the specific `acousticeye.application` instance:

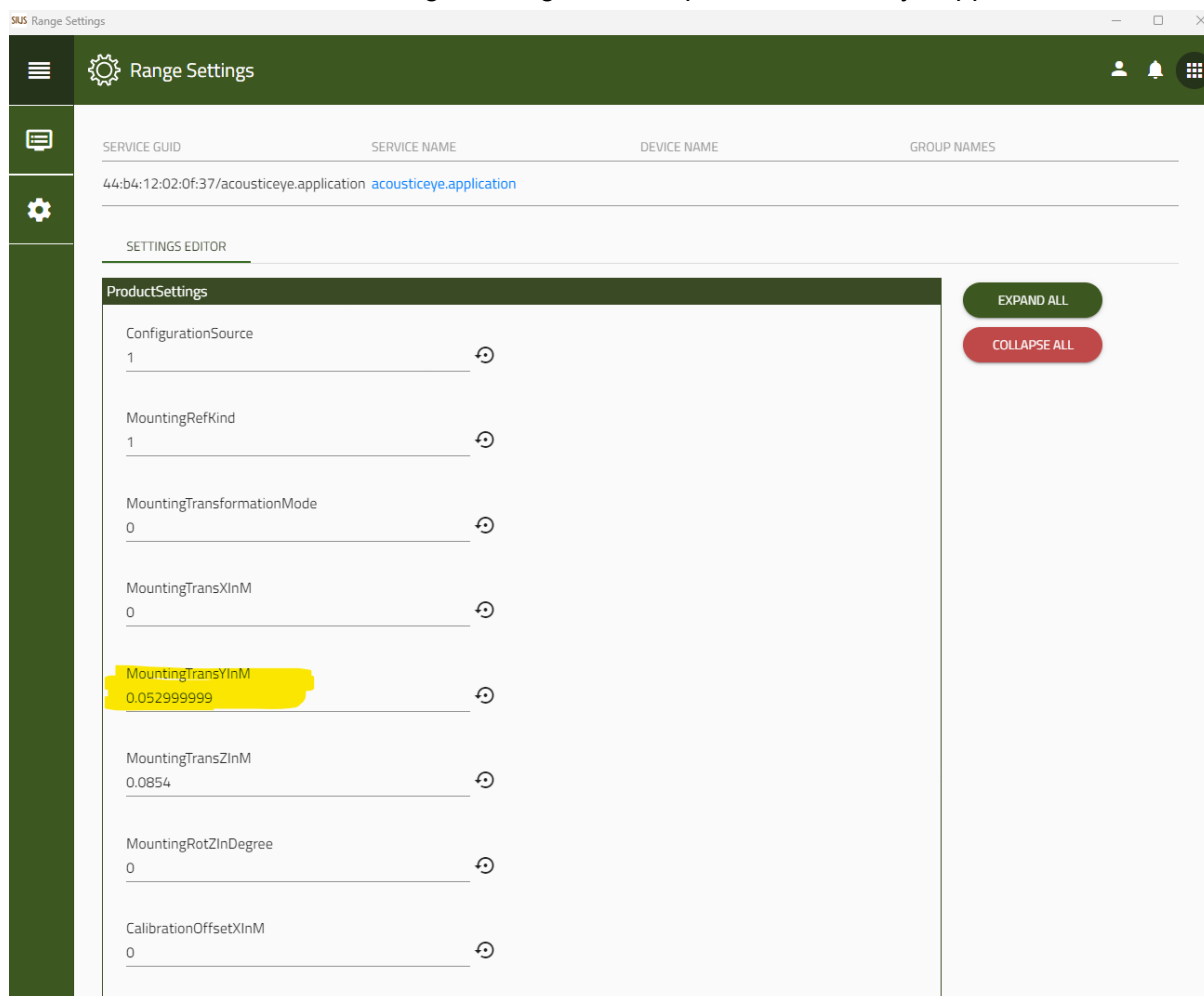

The value has to be the orthogonal distance between the base of the microphone and the location with the designated coordinates 0/0 in meters.