SIUSLANE[®] Quick Guide for installation/start-up

Set up the PC/Laptop

Installation of software SIUSLANE® and drivers of required components

Before connecting, required software and drivers has to be installed on the computer.

8.1 Insert USB stick (a)

8.2 Execute the installation of SIUSLANE (standard)

Start installation program «SiusLaneInstaller.exe».

Important: if there is already an older version of SIUSLANE (<2.0) installed on the computer, SIUSLANE must be installed *before* installing the SIUSCommService.

8.3 Execute the installation of SIUSCommService

Start installation program «CommServiceInstaller.msi». At the end of the installation start the CommServiceManager.

8.4 Connect the USB-LON-dongle (b) with the PC/Laptop

A driver is needed – search automatically on the CD and install it. After the succesful installation the blue "PWR"-lamp on the USB-LON-dongle lights up. Now the **LTW cable (c)** from the target can be connected with the USB-LON-Dongle.

8.5 Start SIUSCommService

Right click on the icon of the CommServiceManager in the taskbar > start the SIUSCommService. SIUSCommService searches all connected devices. The connected target is visible under the status of the CommServiceManager (register: application).



8.6 Connect the optional USB remote control (d) with the PC/Laptop A driver is needed – search automatically on the CD and install it. After the succesful installation the green lamp lights up.

8.7 Disable the power safe mode of the PC

Under Control Panel > Hardware and Sound > Power options > Change power saver settings > Change plan settings > «never»

8.8 Restart PC/Laptop

(after every start-up of the PC/Laptop, the SIUSCommService must be restarted > 8.5)











SIUS

SIUSLANE[®] Quick Guide for installation/start-up

Use of the software SIUSLANE

Introduction until the first shot



By double clicking the SIUSLANE icon on the desktop, the program will be started.

