

USB Configuration for STYX Ranges

(From Version 3.1..x)

To configure a STYX Range without using the Range Configurator Wizard this procedure can be followed:

Prepare a USB Stick

Format a USB stick with FAT32. Existing content will be deleted. From the sales department you will get a file which has to be copied to the USB stick.

Execute the configuration

1. Turn on the whole range and wait until all devices are powered and show the error "No active configuration". Make sure that the USB stick is not plugged in.
2. Turn off (unplug) the infrastructure server
3. Plug in the USB stick with the provided file
4. Start infrastructure and wait until the error disappears from the devices. Give it some more minutes
5. Unplug the USB stick
6. Restart infrastructure

Check for errors

If something goes wrong, a failure log is saved on the USB stick.