

<b>1.0 SIUS Cockpit registration</b>	<b>2</b>
1.1 Open SIUS Cockpit	2
1.2 Open Range Board Launcher	2
1.3 Access Data	3
1.4 Range Details	4
1.5 Range Time	4
1.6 S-Cloud	4
1.7 Services	4
1.8 Shot Counter	4
<b>2.0 Range Configurator</b>	<b>5</b>
2.1 Range plans	5
2.2 Health Check	5
2.3 System Check	5
2.4 Home	5
2.5 Configurations	5
2.6 Devices	5
2.7 Services	5
2.8 Wizard	5
<b>3.0 Range Settings</b>	<b>6</b>
3.1 Services	6
3.2 General Settings	6
<b>4.0 Range Update</b>	<b>7</b>
4.1 Update Range	7
4.2 Clients	7
4.3 Store	7
4.4 Installations Jobs	7
<b>5.0 Resource Server</b>	<b>8</b>
5.1 Packages	8
5.2 User	8
5.3 Exercises	8
5.4 Target Pictures	8
5.5 Flag Images	8
5.6 Weapons	8
5.7 Hephaistos	8
5.8 Mappings	8

 
<b>6.0 Sensor Data Analysis</b>	<b>9</b>
6.1 LS2550	9
<b>7.0 STYX Service</b>	<b>10</b>
7.1 STYX Tree	10
7.2 Network Connectors	10
<b>8.0 Watchtower</b>	<b>11</b>
8.1 Range Control	11
8.1.1 Range Overview	11
8.1.2 Exercise Control	11
8.1.3 Exercise Controllers Settings	11
8.2 Assign	11
8.3 Lane View	11
8.4 Exercises	11
8.5 Maintenance	11

## 1.0 SIUS COCKPIT REGISTRATION



### 1.1 Open SIUS Cockpit

- Open the SIUS Cockpit with a double click on the icon.

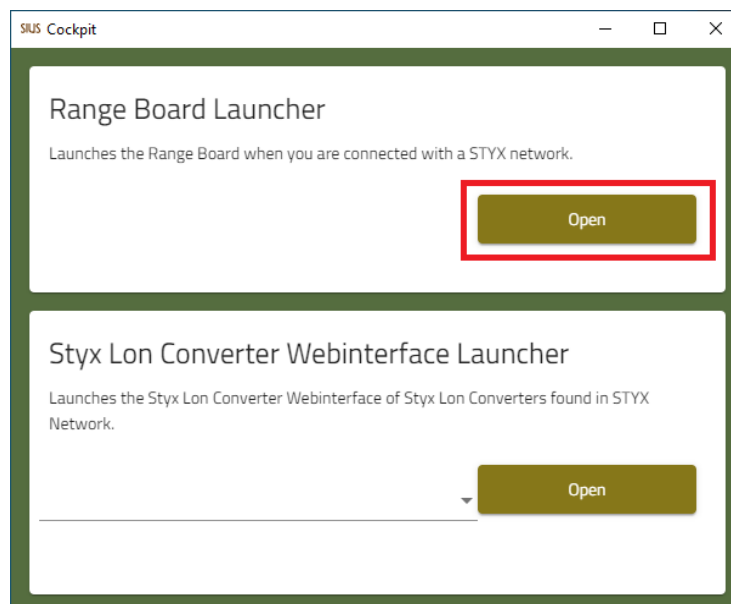

### 1.2 Open Range Board Launcher

- Click on «Open» to open the range board.

## Login

User Name

**admin**

Password

 
Login

OR

Login as guest

### 1.3 Access Data

- Enter the access data  
Username: **admin**  
and click Login

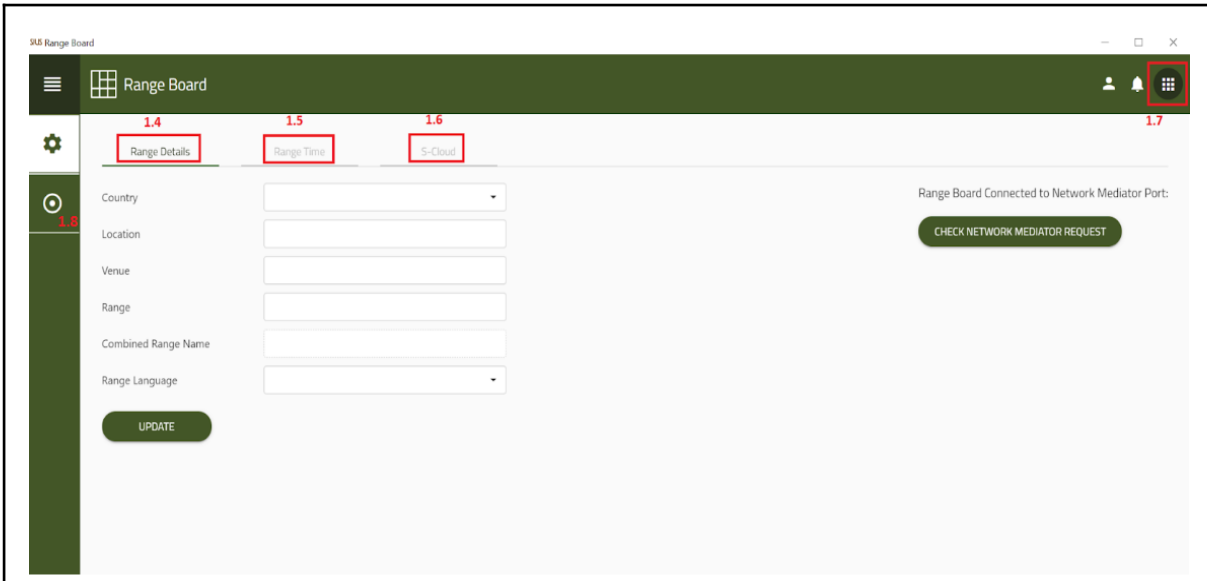

## 1.4 Range Details

- Here you can see and set the range details like country, location, range language etc.

## 1.5 Range Time

- In the range time you can set the time zone of the respective country as well as the time.

## 1.6 S-Cloud

 
- The data is stored in the S-Cloud. When activating the live Opinion

## 1.7 Services


- Here you will find all services.

## 1.8 Shot Counter

- Overview of the total shots pro Lane

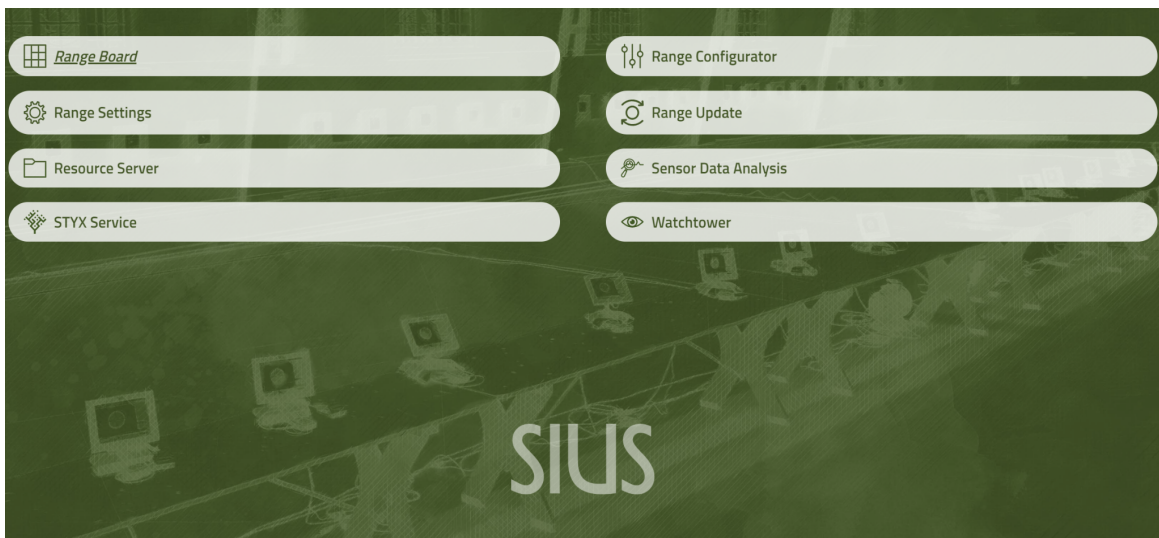

## 2.0 RANGE CONFIGURATOR

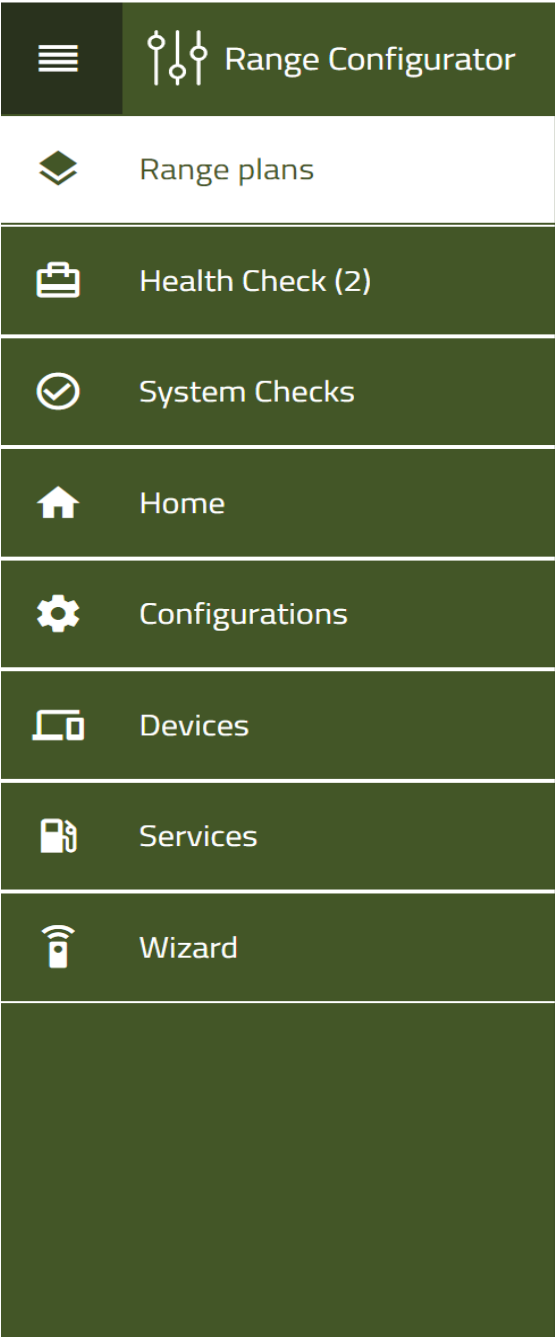 <p>SIUS Range Configurator</p> <p>Range Configurator</p> <ul style="list-style-type: none"> <li>Range plans</li> <li>Health Check (2)</li> <li>System Checks</li> <li>Home</li> <li>Configurations</li> <li>Devices</li> <li>Services</li> <li>Wizard</li> </ul>	<p><b>2.1 Range plans</b></p> <ul style="list-style-type: none"> <li>➤ With Range plans you can upload the plans from the layout.</li> </ul> <p><b>2.2 Health Check</b></p> <ul style="list-style-type: none"> <li>➤ Error messages / warnings are displayed in the Health Check.</li> </ul> <p><b>2.3 System Check</b></p> <ul style="list-style-type: none"> <li>➤ The system can be checked here for mistakes. For the complete STYX system.</li> </ul> <p><b>2.4 Home</b></p> <ul style="list-style-type: none"> <li>➤ Grouping of configured devices.</li> </ul> <p><b>2.5 Configurations</b></p> <ul style="list-style-type: none"> <li>➤ Here the configurations can be uploaded to the cloud.</li> </ul> <p><b>2.6 Devices</b></p> <ul style="list-style-type: none"> <li>➤ Here you can see all devices and their status. In addition, there are simplified functions to perform tests or replace devices.</li> </ul> <p><b>2.7 Services</b></p> <ul style="list-style-type: none"> <li>➤ Here you will find all services that are active on your servers or devices.</li> </ul> <p><b>2.8 Wizard</b></p> <ul style="list-style-type: none"> <li>➤ The wizard is used for the initial installation. With the wizard, the configurations can be set with just a few clicks.</li> </ul>
---	--

## 3.0 RANGE SETTINGS

The screenshot displays the 'Range Settings' web application. At the top, there is a navigation bar with a hamburger menu, a gear icon for 'Range Settings', and user profile icons. Below the navigation bar, the main content area is titled 'Registered Services'. It features a search bar, a 'REFRESH' button, and a 'RECONNECT CLIENTS' button. A table with the following columns is shown: SERIAL NUMBER, IP ADDRESS, HOSTNAME, SERVICE NAME, and ACTIONS. The ACTIONS column contains a vertical stack of edit and delete icons for each row. A sidebar on the left contains a settings gear icon.

 
### 3.1 Services

- Setting the devices.

### 3.2 General Settings

- The log level setting should only be changed for debugging purposes.

## 4.0 RANGE UPDATE

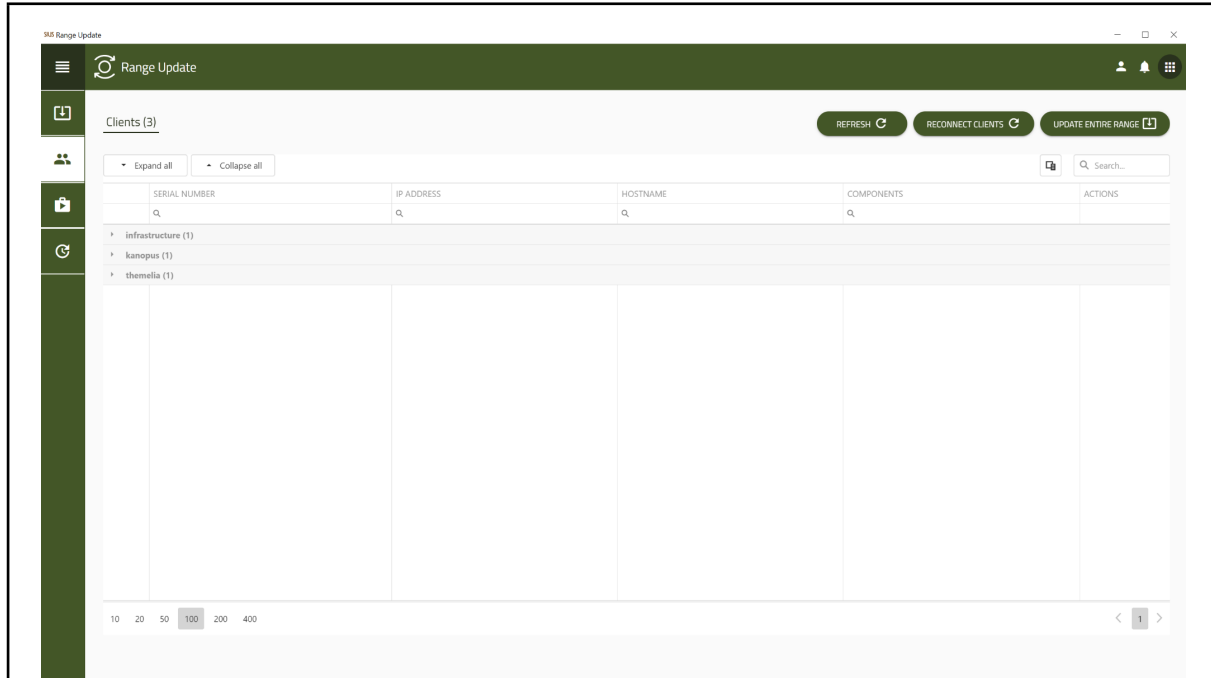

### 4.1 Update Range

- Here, you can update the entire system online with just a few clicks. **Pre-condition: The Network Master is connected to the network.**

### 4.2 Clients

- All devices and servers are listed under Clients and their current software version.

### 4.3 Store

 
- The system can be set manually via the store updated become. The latest version can be found at [software.sius.com](https://software.sius.com)

### 4.4 Installations Jobs

- In this function, the update status of the respective devices is displayed.



## 5.0 RESOURCE SERVER

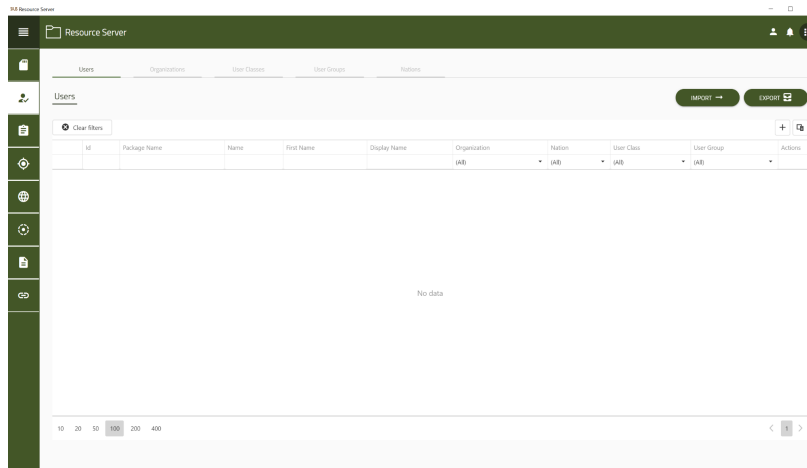

## 5.1 Packages

- Here you can create whole packages, you can export them or import predefined packages.

## 5.2 User

- In the User section, you can create the shooter or import a list of predefined shooters. You can also export the current shooters.



## 5.3 Exercises

- Exercises can be created in Exercises and the predefined exercises can be activated.

## 5.4 Target Pictures

- Under Targets, you will find all the targets that are included in the package.

## 5.5 Flag Images

- All flags that are included in the package can be found under Flags.

## 5.6 Weapons

- Under Weapons, you will find all the weapons that are included in the package.


## 5.7 Hephaistos

- The evaluation methods and parameters are stored under Hephaestus.

## 5.8 Mappings

- **Description**


## 6.0 SENSOR DATA ANALYSIS

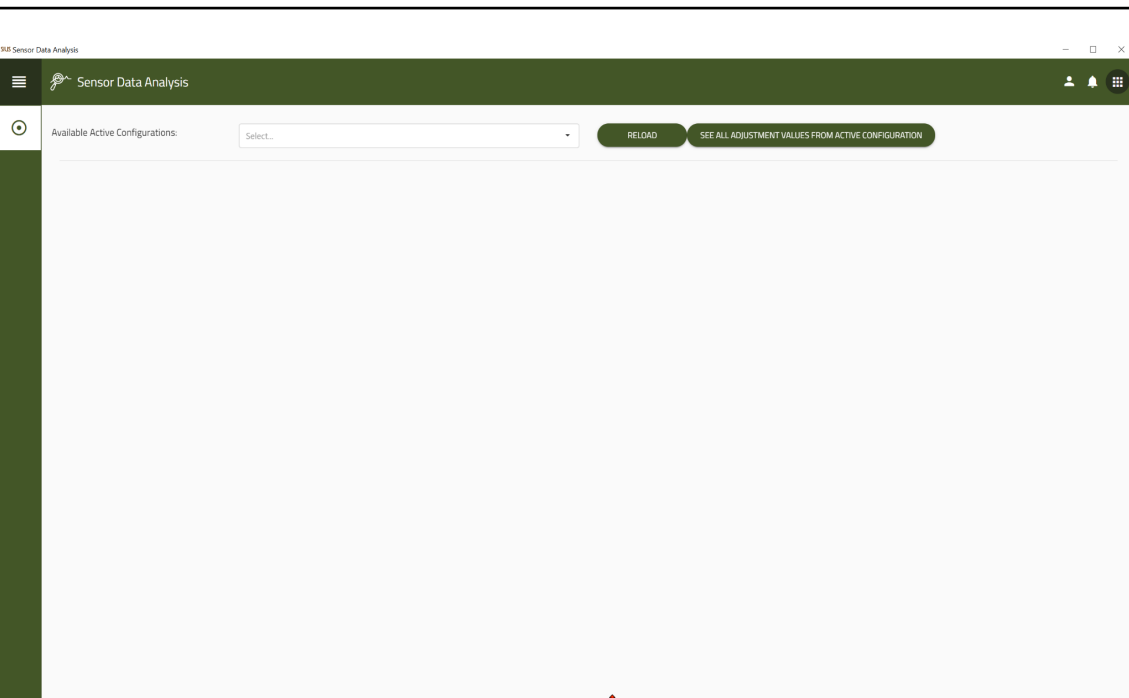

6.1 LS2550

- Here, the data of the selected target can be analyzed.

## 7.0 STYX SERVICE

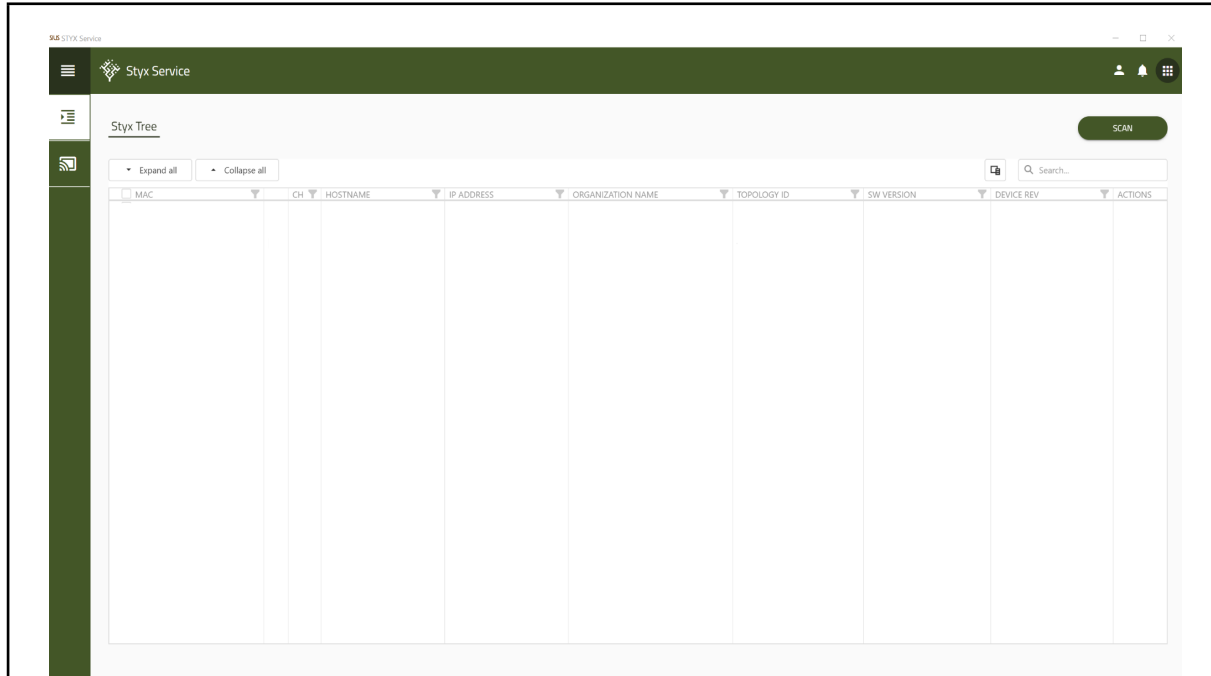 


### 7.1 STYX Tree

- Here you will find the topology of the connected devices.

### 7.2 Network Connectors

- Here you will find the topology of the respective network connectors and the current software.
 
## 8.0 WATCHTOWER

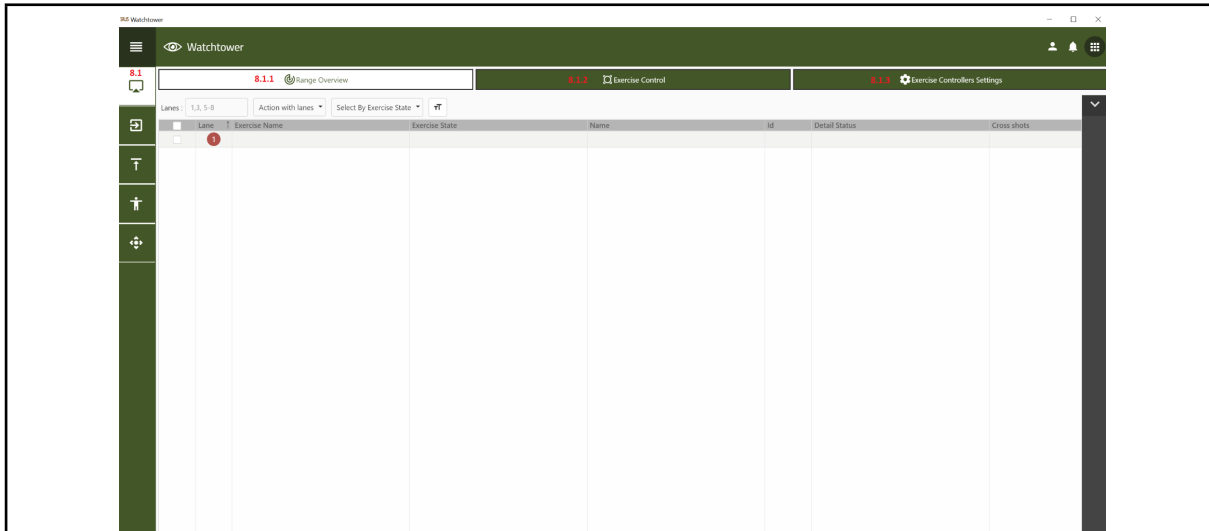

### 8.1 Range Control

- control of the plant

#### 8.1.1 Range Overview

- Overview of the entire facility

#### 8.1.2 Exercise Control

- **Exercise control:** Assignment of drills, shooters and lanes.

#### 8.1.3 Exercise Controllers Settings

- Exercise control settings

### 8.2 Assign

- Here the respective shooters can be assigned to the lanes or exchanged.

### 8.3 Lane View

- In the Lane Viewer you can view individual lanes choose, a shooter to assign, start or stop the exercise. Under other you can get one here simulated fire shot.

### 8.4 Exercises

- Saved practice data per shooter or all shooters

### 8.5 Maintenance

- For the Extinguish of exercise data (refer to 8.4)

