


Manual ATE10 Configurator

1	Table of contents	
2	PREREQUISITE	2
3	START PROGRAM	2
4	SCAN NETWORK	2
5	CHANGE PREDEFINED POSITION	3
5.1	PREDEFINED POSITION	3
5.2	DESIRED POSITION	3
5.3	SAVE DESIRED POSITION	4

2 Prerequisite

1. SIUSLonUtility has to be installed
2. Connect a network interface (SNI210 or XLON-Dongle) to your LON-Network (see system layout)
3. Close all SIUS software applications and stop SiusCommService if running

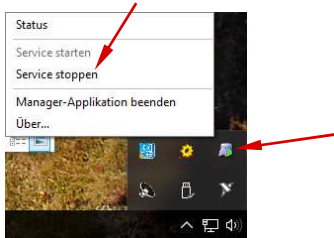


3 Start program

Start „ATE10 Configurator“ ¹. After installing SIUSLonUtility there is a link on your Desktop.


4 Scan network

1. Press „Clear and Search“ to scan network
2. Select ATE10

Note: It's impossible to select ATE10 individual. You have to disconnect all ATE10 you don't want to select.

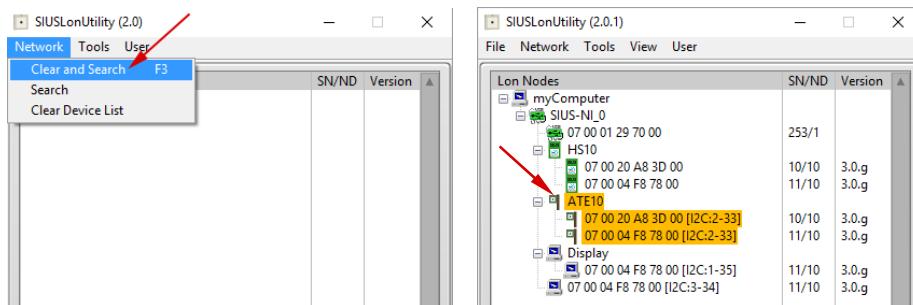

After selecting ATE10, ready lamp should light green

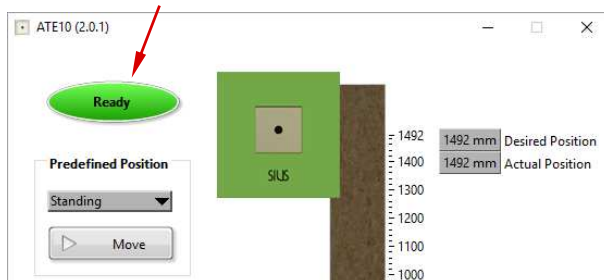


5 Change predefined Position

5.1 Predefined Position

Select the predefined position that you want to change (Standing, Kneeling, Prone)


Note: The bright target shows you the default value

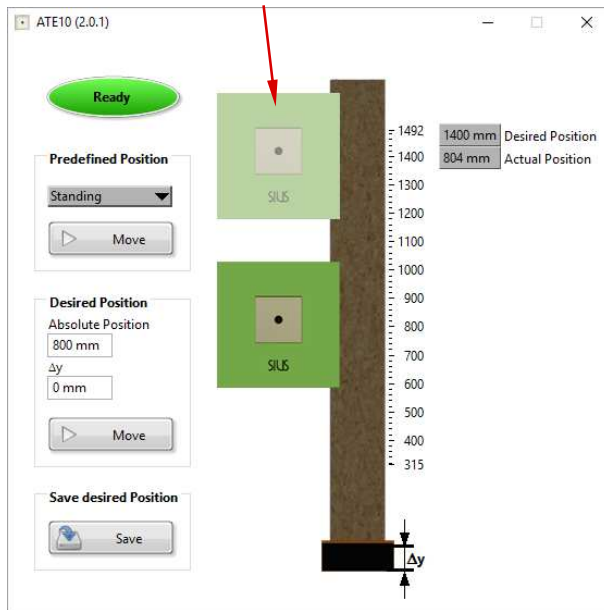

5.2 Desired Position

Type the Position in the field "Absolute Position". Press "Move" to move the selected target lifters to the desired position.

Optional: If the lift is installed on a socket, then you have the possibility to specify it with "Δy"

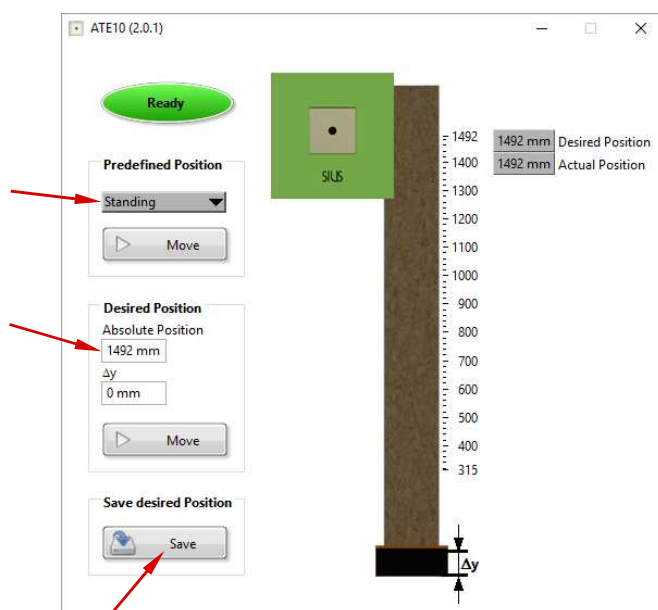

5.3 Save desired Position

Press “Save” to save the desired position in the selected predefined position