



# Manual SIUS Range Check

## 1 Prerequisite

1. SIUSLonUtility has to be installed
2. Connect a network interface (SNI210 or XLON-Dongle) to your LON-Network (see system layout)
3. Close all SIUS software applications and stop SiusCommService if running

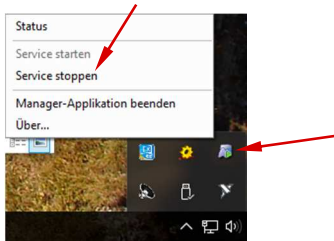


## 2 Start program

Start „SIUSRangeCheck“ . After installing SIUSLonUtility there is a link on your Desktop.


## 3 Scan network

Press „Clear and Search“ to scan network. Select Devices to be checked.

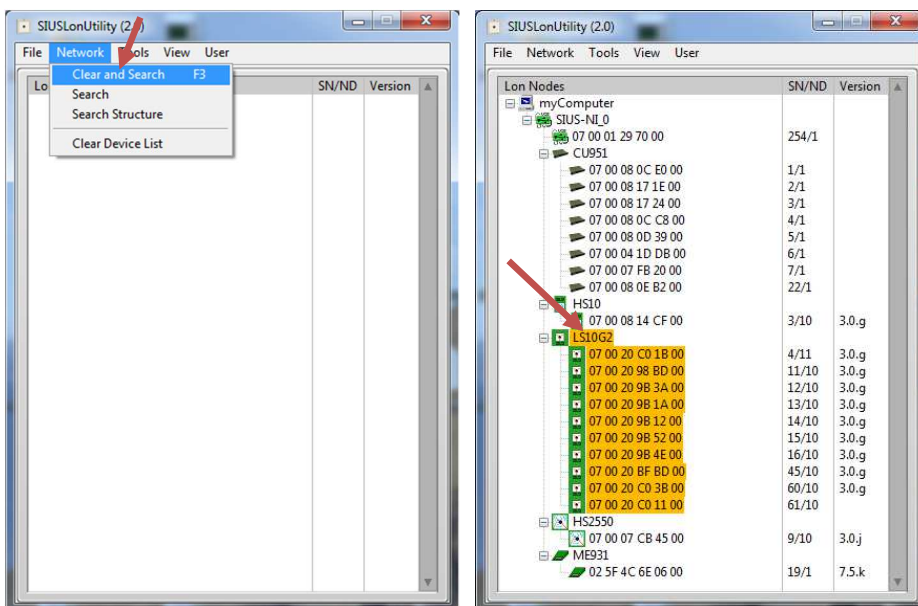


### 4 Check range

1. Press „Check range“ to start test

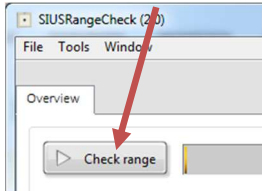

2. Once the test is complete save the data

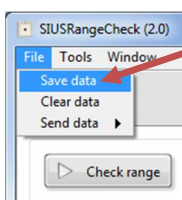

3. If necessary send data to SIUS support

