

Printersettings D112 - PE Buffer Clear

In the printersettings the point "PE Buffer Clear" can be turned on, which prevents the reprinting of a shot program when the printer flap is closed after shooting.

Open printersettings

To open the printer settings press Feed + Charge during turn on the printer.



Adjust PE Buffer Clear setting

```

FUNCTION SETTING MODE
CHARACTER SET      = ENGLAND
FONT SIZE          = 24DOT
LENGTH TYPE        = TYPE A
PE BUFFER CLEAR    = OFF
PAPER TYPE         = NORMAL PAPER
COVER CLOSE MARK DETECTION= OFF
POWER ON LABEL N4 ACTIVE = OFF
CODE PAGE          = PC437

*
ENTER MODE SETTING
[YES(FEED)/NO(CHARGE)]
CHARACTER SET      = ENGLAND
FONT SIZE          = 24DOT
LENGTH TYPE        = TYPE A
PE BUFFER CLEAR    = OFF
PE BUFFER CLEAR    = ON
PAPER TYPE         = NORMAL PAPER
COVER CLOSE MARK DETECTION= OFF
POWER ON LABEL N4 ACTIVE = OFF
CODE PAGE          = PC437

SETTING COMPLETED

```

Confirm the current settings by pressing the "Feed" button up to the "PE BUFFER CLEAR" menu item.

Then use the "Clear" button to change the "PE BUFFER CLEAR" setting to ON.

Confirm the other menu items again with the "Feed" button until the message "SETTING COMPLETED" appears.

After adjusting this setting, nothing will be reprinted if the printer was open or no paper was inserted.

Standard Settings

```

FUNCTION SETTING MODE
CHARACTER SET      = ENGLAND
FONT SIZE          = 24DOT
LENGTH TYPE        = TYPE A
PE BUFFER CLEAR    = OFF
PAPER TYPE         = NORMAL PAPER
COVER CLOSE MARK DETECTION= OFF
POWER ON LABEL N4 ACTIVE = OFF
CODE PAGE          = PC437

```